
Table of Contents

| | |
|---|----|
| Power On/Off | 3 |
| Pre-Startup Checks | 3 |
| Power On for System 97/99 | 4 |
| Automatic Cold Start | 5 |
| Wrong Power Off Procedure | 6 |
| Auto Startup Program | 7 |
| Power Off Procedure | 9 |
| | |
| Pendant | 11 |
| Video ON/OFF Switch | 11 |
| Optional Stop Switch | 11 |
| Block Skip Switch | 11 |
| Keylock | 12 |
| Alternate NOEDIT Feature | 13 |
| Positioning Read Out Display | 13 |
| How to Display the Position Read-out: | 14 |
| Axis Load Display | 14 |
| Manual Data Input Display | 15 |
| Large Format Display | 15 |
| Modes | 15 |
| Quick Keys Menu | 16 |
| Edit Menu | 16 |
| Functions Menu | 16 |
| Using the Command Mode | 16 |
| Cursor in the Command Mode | 17 |
| Using the Delete Key | 18 |
| Using the Menu Mode | 19 |
| | |
| Jog Mode | 21 |
| Jog Using the Manual Pulse Generator | 21 |
| Jog Using the Keyboard | 22 |
| Jog Using the Remote Manual Pulse Generator | 22 |
| Jog Using the Vector Jog for 5 Axis Head | 23 |
| Single Step, Jog Away From | 24 |
| Slide Hold, Jog Away From | 25 |
| Waiting Stage, Jog Away From | 26 |

| | |
|---|-----------|
| Run Mode | 29 |
| Auto, Running a Program | 29 |
| Waiting | 30 |
| Changing Modes | 30 |
| Manual Pulse Dry Run | 31 |
| Dry Run | 32 |
| Single Step | 33 |
| Slide Hold | 34 |
| Mid-Tape (Program) Start | 34 |
| Emergency Stop | 37 |
| Emergency Stop | 37 |
| Formats | 39 |
| Formats | 39 |
| Changing Parameters | 40 |
| Saving Parameters | 40 |
| FORMAT 1 Parameter Settings | 41 |
| FORMAT 2 Parameter Settings | 42 |
| FORMAT 1 Program Example #1 | 43 |
| FORMAT 1 Program Example #2 | 44 |
| Notes on FORMAT 1 Style Programming: | 46 |
| FORMAT 2 Program Example | 47 |
| Notes on FORMAT 2 Style Programming: | 49 |
| Viewing the Software ID Number | 50 |
| Spindle | 53 |
| Manual Operations | 53 |
| Spindle, RPM Established from MDI | 54 |
| Using the Spindle ON/OFF Button | 55 |
| Spindle, Loading a Holder from the ATC | 55 |
| Spindle, Unorient to Turn by Hand | 55 |
| Spindle, Orient | 56 |
| Spindle Reversed While Using Jog | 57 |
| Tool Changer | 59 |
| Turret (ATC), Open for Loading; Using the TC,1 Command | 59 |
| Tool Changer Crash | 59 |
| Turret Loading, Putting Tools in the Tool Changer | 60 |
| Turret (ATC), Establish Tool Order; Using the SETTO Command | 61 |
| Coolant | 63 |
| Using the Coolant 1 and Coolant 2 Buttons | 63 |
| Coolant-Through Spindle | 63 |

| | |
|--|-----------|
| Commands | 65 |
| Command Use Summary | 66 |
| Viewing Error Messages | 68 |
| AU COMMAND | 68 |
| BL COMMAND | 69 |
| CD COMMAND | 71 |
| CH COMMAND | 72 |
| CO COMMAND | 75 |
| CS COMMAND | 75 |
| DE COMMAND | 76 |
| DNC COMMAND | 76 |
| Direct Numerical Control, Using a Server Program | 77 |
| FO COMMAND | 78 |
| Viewing the Fixture Offset Table | 80 |
| Changing the Fixture Offset Information | 81 |
| IN COMMAND | 81 |
| LE COMMAND | 83 |
| LI COMMAND | 85 |
| MD COMMAND | 86 |
| ME COMMAND | 87 |
| NE COMMAND | 87 |
| NU COMMAND | 88 |
| PA COMMAND | 88 |
| Program Editing Using PA | 88 |
| Background Edit | 89 |
| To List The Program | 90 |
| To Insert Between Lines | 90 |
| To Search The Program | 91 |
| To Change a Line | 92 |
| To Delete a Line | 92 |
| To Run a Single Line From the Program | 92 |
| To do a Direct Mid-Program Start | 93 |
| PR COMMAND | 93 |
| To Use the Program Library Menu: | 94 |
| RI COMMAND | 95 |
| USING THE SETTO COMMAND | 96 |
| SETP COMMAND | 96 |
| CS COMMAND | 97 |
| Establishing part home using an edge finder: | 97 |
| Establishing part home using an indicator: | 98 |
| SETH COMMAND | 99 |
| SL COMMAND | 99 |
| Tool Length Offsets, Purpose and Use in Program | 101 |
| SP COMMAND | 102 |
| SU COMMAND | 102 |

| | |
|--|-----|
| TA COMMAND | 105 |
| Adding a Program to the End of the Program in Memory | 107 |
| Output, to Tape Punch or Computer | 107 |
| TC.I COMMAND | 108 |
| Tool Changer Crash | 108 |
| Turret Loading, Putting Tools in the Tool Changer | 109 |
| TO COMMAND | 110 |
| UT COMMAND | 110 |
| VT COMMAND | 113 |
| CNC88HS GRAPHICS MENU | 113 |
| Plotting Options | 114 |
| Index | 117 |

Operator Manual


FadalCNC.com
Done. Done Right. Overnight!
www.fadalcnc.com • 208-855-9426

This reference covers the following Vertical Machining Centers:

VMC-15
VMC-15XT
VMC-2016L
VMC-2216
VMC-2216HT
VMC-3016
VMC-3016L
VMC-3016HT
VMC-3020
VMC-4020
VMC-4020HT
VMC-4020A
VMC-4525
VMC-5020A
VMC-6030
VMC-8030